

Build the wiringPi on Ubuntu

- If 1-wire module is loaded, then please unload the 1-wire modules.

</WRAP> To use the LCD-IO Shield with wiringPi you build the wiringPi library first.

1. Get the wiringPi library compatible **ODROID-XU4**.

```
$ sudo apt install git
$ git clone https://github.com/hardkernel/wiringPi
```

2. Build the library

```
$ cd wiringPi
$ ./build
```

Tutorials

- [Basic example](#)
- [Display System informations](#)
- [Interrupt example](#)
- [Display sensors value with Weather-Board](#)

From:
<http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:
http://wiki.odroid.com/accessory/display/16x2_lcd_io_shield/xu4/start

Last update: **2017/08/17 03:23**

