

The external power switch

You can turn on or off the ODROID-H2 with the external power switch instead of the onboard switch (PWR_ON1).

The power pin (PWR_BTN) is exposed to the pin #17 on the pin header (EXT_HEAD1) and this pin needs to be shorted to GND momentary.

Please note you can wire up the momentary on-off switch only, otherwise, the ODROID-H2 will keep turning on and off.

There is a small power switch on the ODROID-H2 board. But it is not easy to access the switch when you assemble(place?) the board in to a case.

This beautifully illuminated power button is a good solution what you need!

This button can be mounted on the official acrylic case Type-1, Type-2, Type-3 and Type-4.

Note that the blue LED forward voltage must not exceed 3.5Volt.

Red wire: LED positive (Anode) : pin-4 or pin-7 or pin-14 on 20 pin header of ODROID-H2

Black wire: LED negative (Cathode) : GND(pin-1) on 20 pin header of ODROID-H2

Blue wire : Switch-A : #PWR_BTN(pin-17) in 20 pin header of ODROID-H2

Green wire : Switch-B: GND(pin-19) on 20 pin header of ODROID-H2

This blue illuminated power button has a built-in LED which turns on when the system power is on. Since the pinout #4 supplies "+3.3V" when the ODROID-H2 is turned on, you can wire up the VCC on the switch to this pin.

If you need to use "+3.3V" for another device, you also can use UART_RTS# alternatively.



Install a Power Switch

When connect to +3.3V



When connect to UART_RTS1#



When connect to UART_RTS2#



Last update: 2018/11/20 01:34
odroid-h2:application_note:external_power_switch http://wiki.odroid.com/odroid-h2/application_note/external_power_switch?rev=1542677667

From:
<http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:
http://wiki.odroid.com/odroid-h2/application_note/external_power_switch?rev=1542677667

Last update: **2018/11/20 01:34**

