

There is a UART port on the 30pin header.

CON10 - 2×15 pins

Pin Number	Net Name	GPIO & Export No	Default Pin State
6	UART_0.RXD	GPA0.0 (#171)	I(PUDN)
8	UART_0.TXD	GPA0.1 (#172)	I(PUDN)

Access device node
/dev/ttySAC0

I/O voltage range is 0~1.8Volt. Otherwise your ODROID will be damaged permanently.

Refer this link to learn how to use the UART interface. [UART interface using the IO-Port #1](#)

From:
<http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:
http://wiki.odroid.com/odroid-xu4/application_note/gpio/uart

Last update: **2017/07/26 10:44**

