

We can control the **blue LED** with the trigger mode in sysfs. The red LED is hard-wired to the power input rail and cannot be changed.

Turn off

target

```
su -  
echo none > /sys/class/leds/blue\:heartbeat/trigger
```

Turn on

target

```
su -  
echo default-on > /sys/class/leds/blue\:heartbeat/trigger
```

Heartbeat (original state)

target

```
su -  
echo heartbeat > /sys/class/leds/blue\:heartbeat/trigger
```

There are many other trigger modes. But some of them may not work.

target

```
cat /sys/class/leds/blue\:heartbeat/trigger
```



If you want to turn the **LED** off automatically in boot process, add `echo none > /sys/class/leds/blue\:heartbeat/trigger` in `/etc/rc.local` file

From:
<https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:
https://wiki.odroid.com/odroid-xu4/application_note/led_control

Last update: **2017/08/01 16:07**

