

# How to change HDMI output resolution

You can select the HDMI resolution by editing the **boot.ini** file. Just remove three “#” marks for your display.

The boot.ini file must be placed on the FAT partition on your boot media.

The default setting is 1920×1080(60hz).

## Default boot.ini

- [Android boot.ini](#)
- [Ubuntu boot.ini](#)

From:

<http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:

[http://wiki.odroid.com/odroid-xu4/troubleshooting/how\\_to\\_change\\_resolution](http://wiki.odroid.com/odroid-xu4/troubleshooting/how_to_change_resolution)

Last update: **2017/08/01 02:21**

