


How to set Forced SD Boot Mode

With some specific abnormal operations, boot parts of SPI Flash can be corrupted. In this case, OGA/OGS board can't enter a normal boot process even though a proper SD card is inserted, because boot order priority of SPI Flash is higher than SD card's one.

Using a switch, SW18, you can make OGA/OGS to enter a forced SD boot mode regardless of SPI flash status.

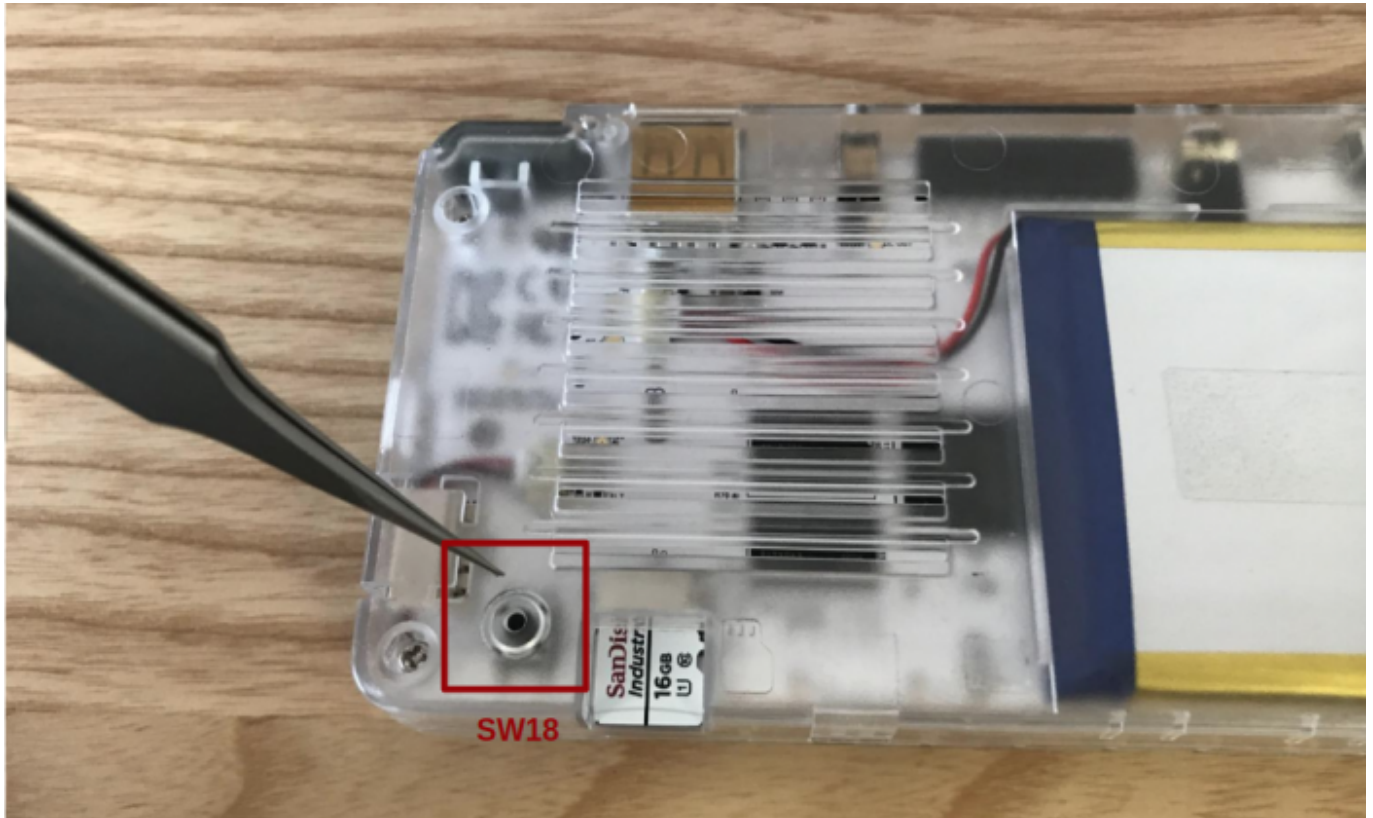



To recover the crashed SPI flash, please refer to the following wiki page.

- [How to upgrade SPI Flash from SD Card](#)

From: <https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link: https://wiki.odroid.com/odroid_go_advance/application_note/forced_sd_boot

Last update: **2021/01/13 11:10**

