



GO-Advance boot flow

Normal boot flow


Early Boot Stage

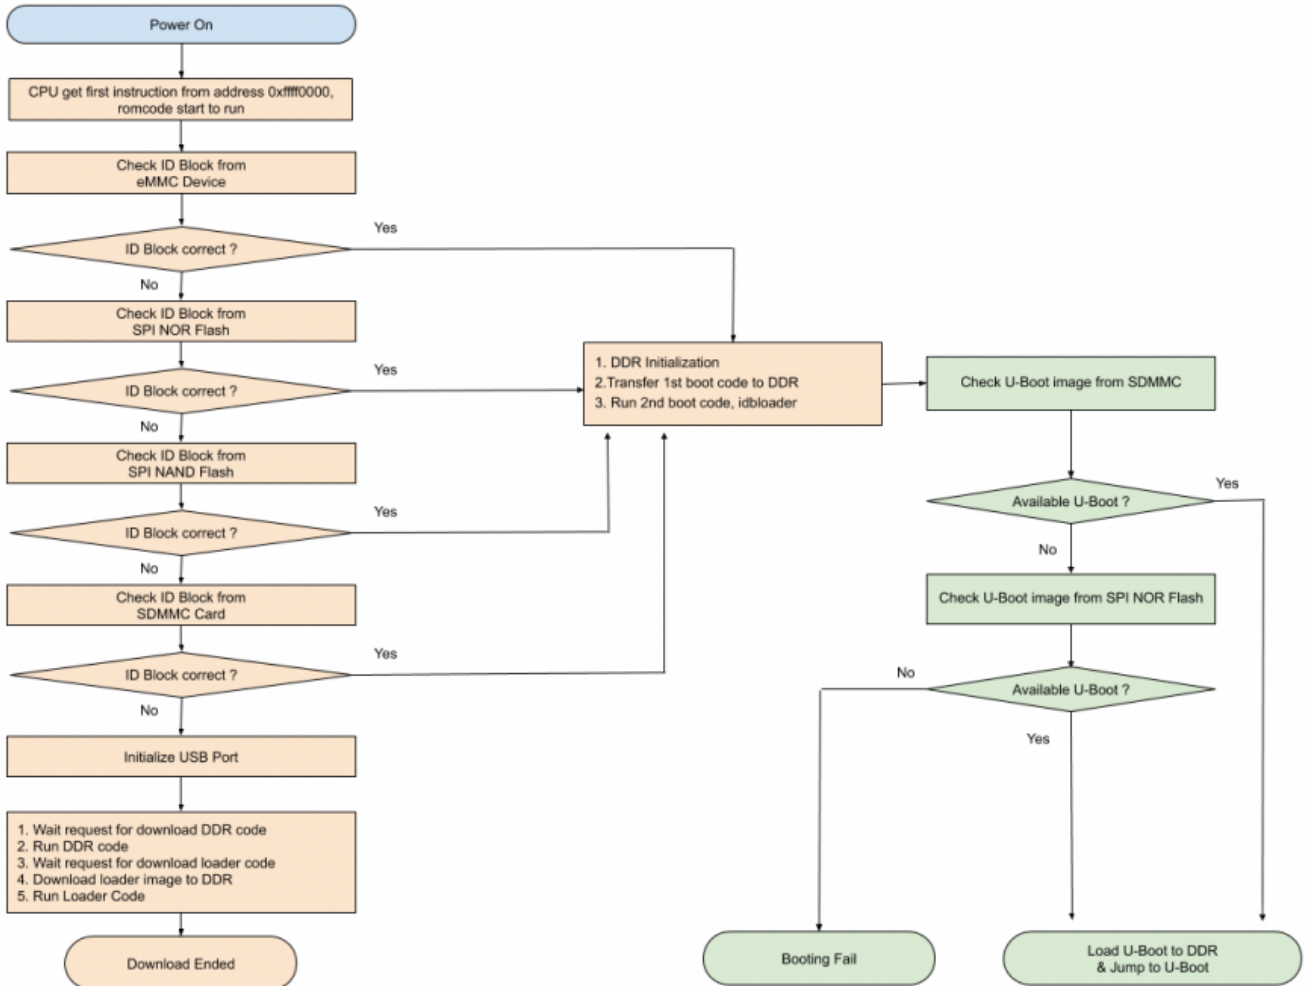


U-Boot Stage

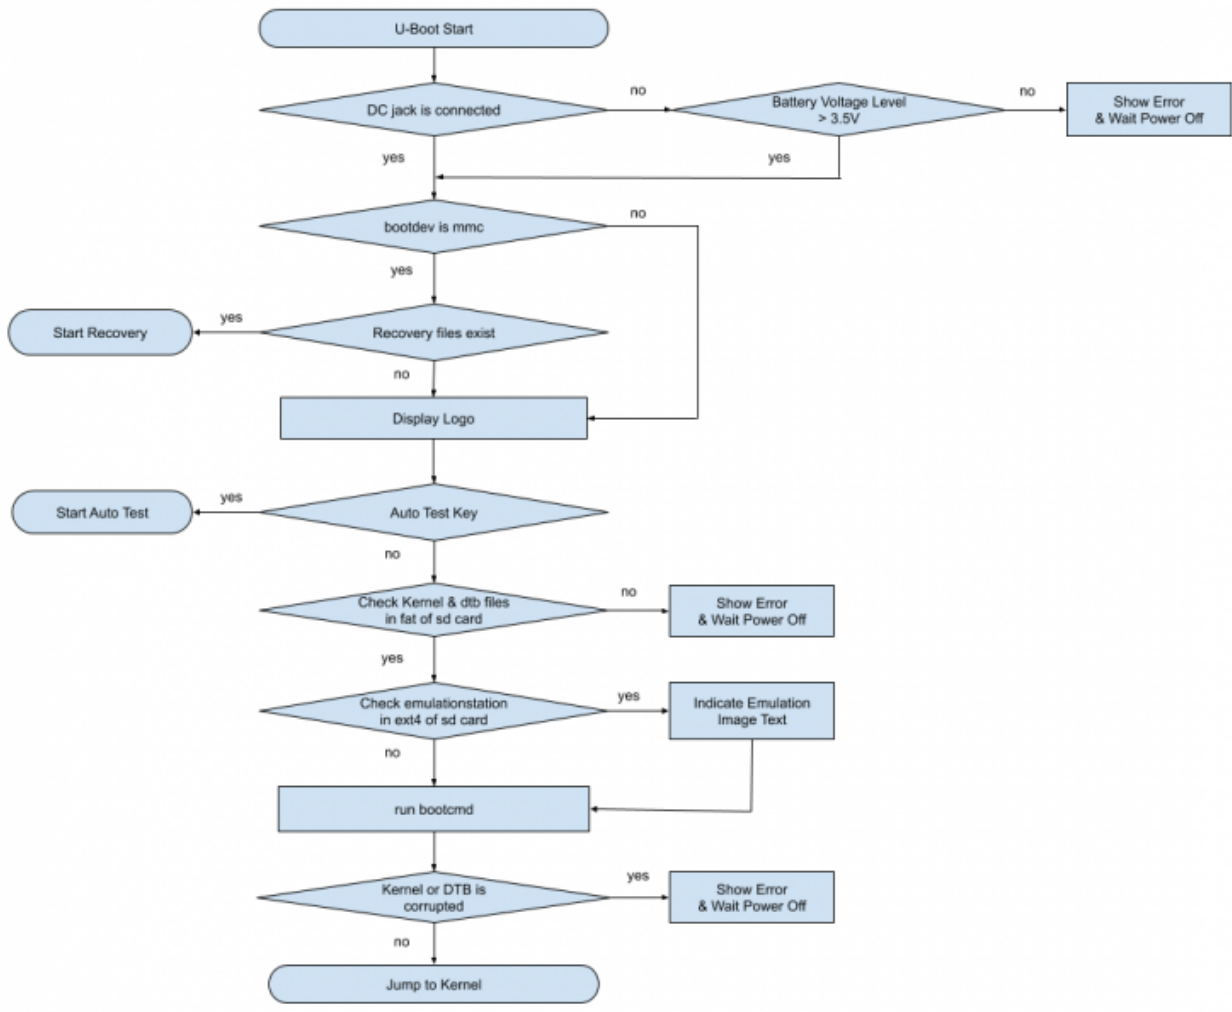

Recovery flow

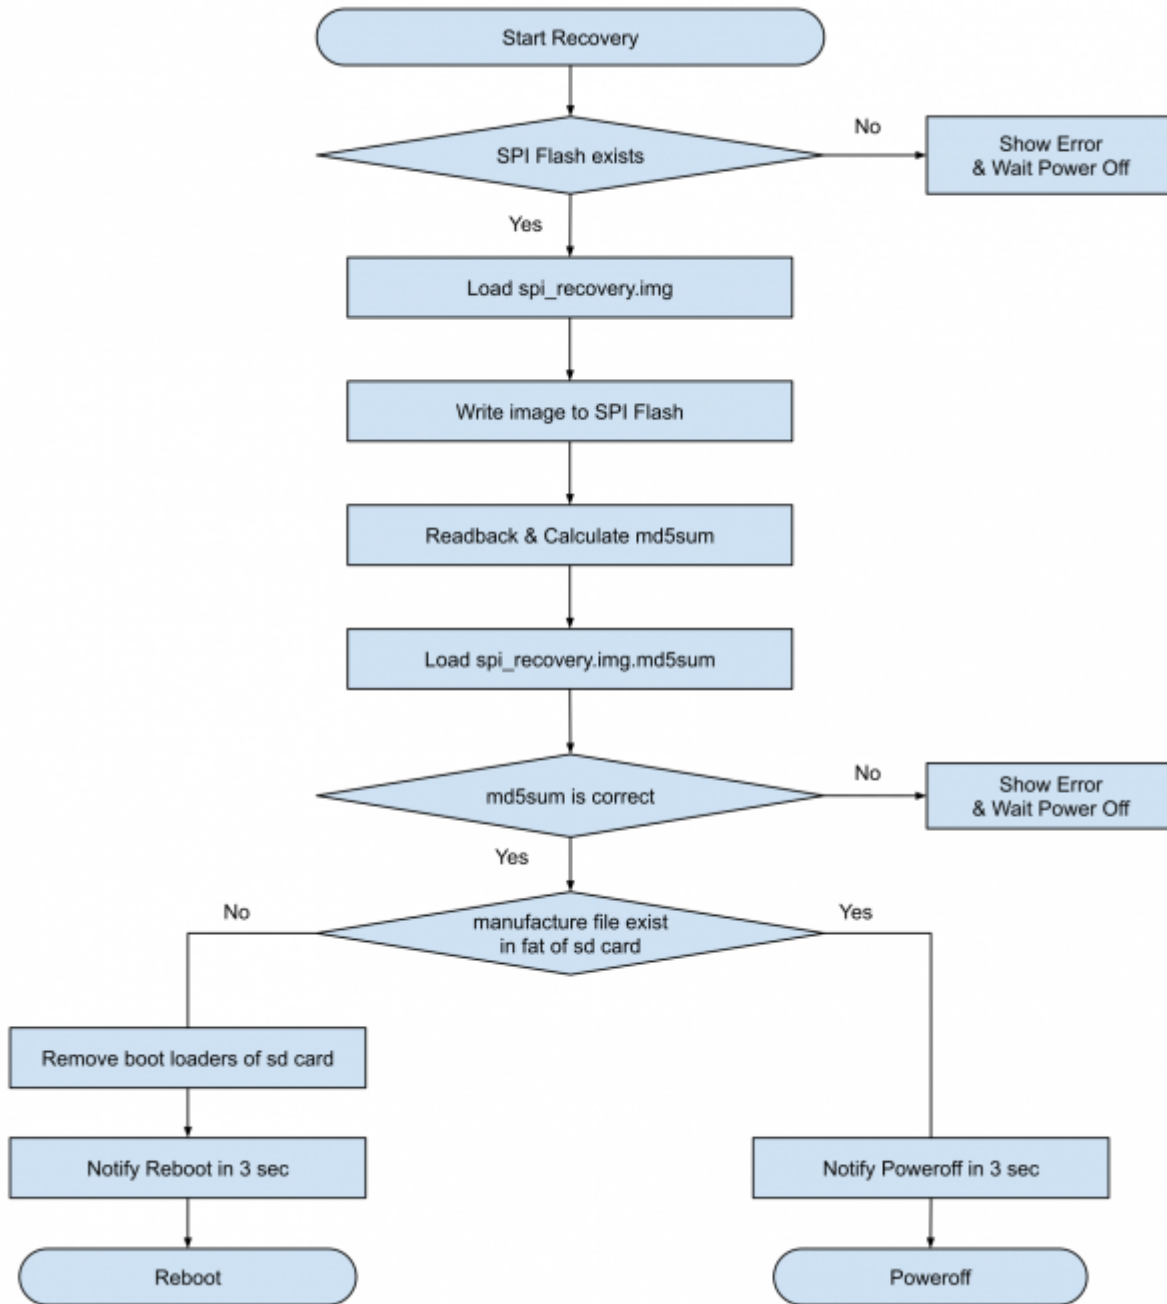

Auto-test flow

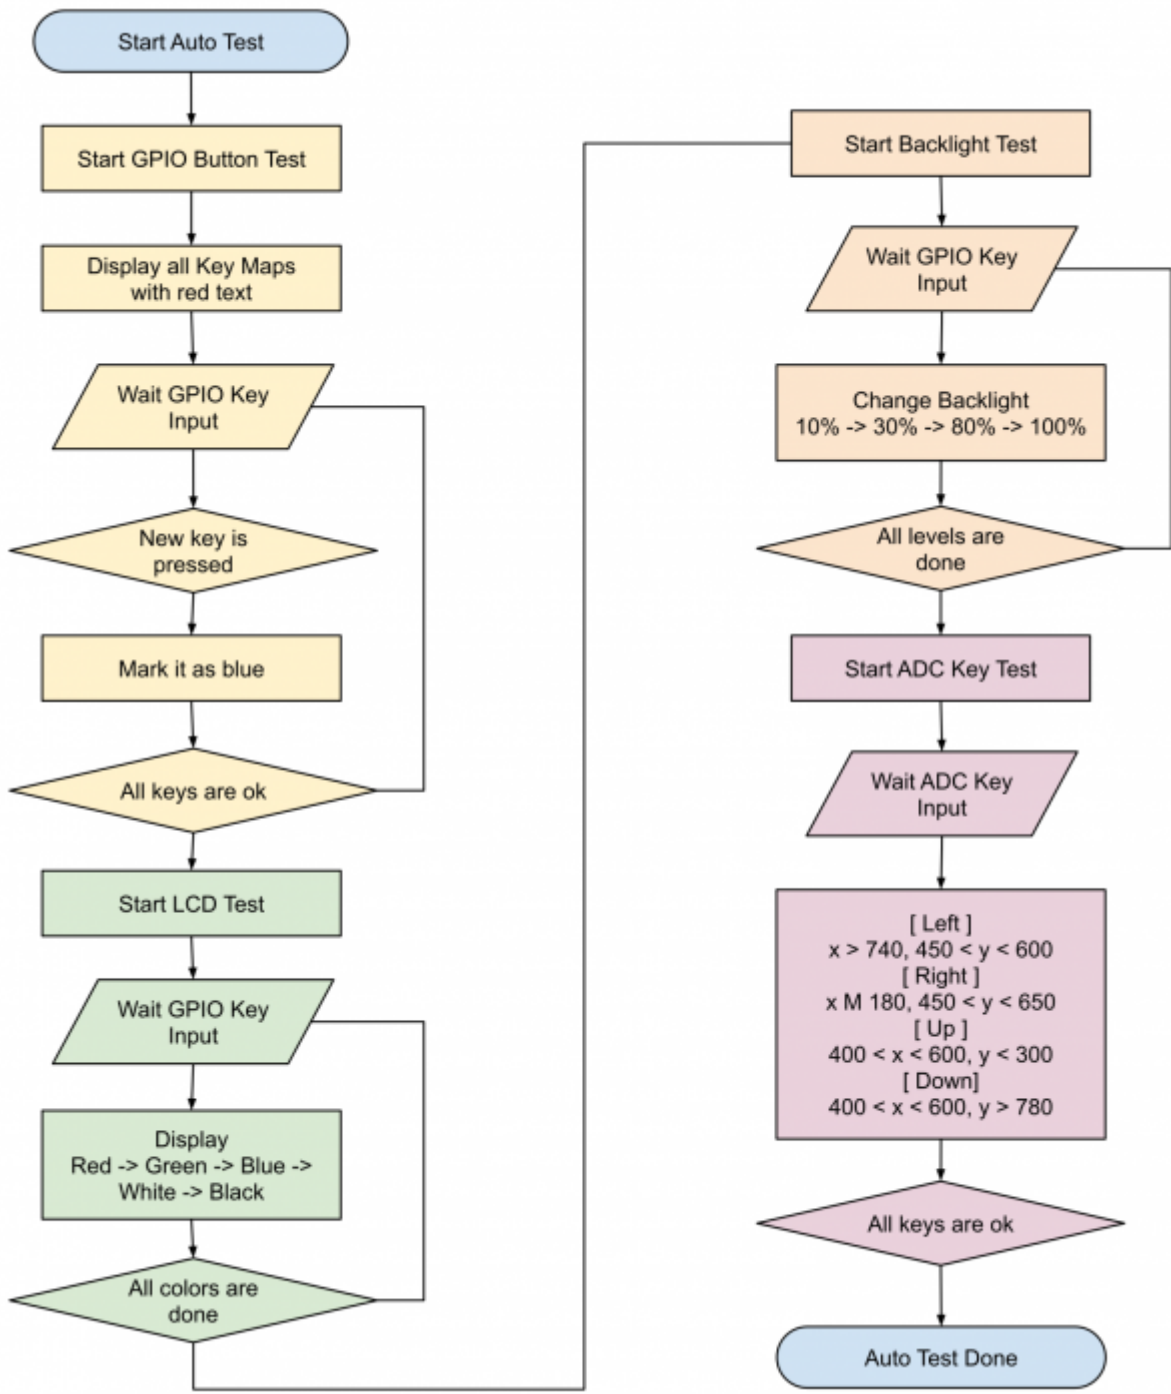

From: <http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link: http://wiki.odroid.com/odroid_go_advance/booting_flow?rev=1577426300

Last update: **2019/12/27 05:58**

