

Connecting your ODROID-GO-Advance to the wireless network with your USB WiFi module.

Compatible WiFi dongles are sold separately.

[WiFi module 0](#)

[WiFi module 3](#)

[WiFi module 5A](#)

If you have an USB to Ethernet module, you don't need to follow these instructions. When you connect your ethernet cable to your USB to ethernet module, ODROID-GO-Advance automatically connects to the network.

And there is no access point to the ODROID-GO-Advance without debugging port(serial UART) until you connect to a network. So you need the ODROID-GO-Advance mounted UART connector to follow these instructions.

Scan WiFi with nmcli

After connecting your [WiFi](#) module to your ODROID-GO, command this instruction.

```
odroid@goadvance:~$ nmcli dev wifi list
```

Connecting

```
odroid@goadvance:~$ sudo nmcli dev wifi con 'your SSID' password 'your password'
```

Check your network

```
odroid@goadvance:~$ ping google.com
```

From:
<https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:
https://wiki.odroid.com/odroid_go_advance/wifi

Last update: **2020/02/03 11:43**

