

ODROID-XU3 Boot Mode Configuration

ODROID-XU3 has a switch, DIP-SW(SW1), to choose the boot media.


**The boot configuration dip-switches must be set to boot from the SD card.
The device does not automatically default (fail-over) to the SD card if no eMMC is preset.**

SW1-1,2	1st Boot media
ON ON	eMMC
OFF ON	MicroSD card

eMMC Boot Mode



MicroSD Boot Mode

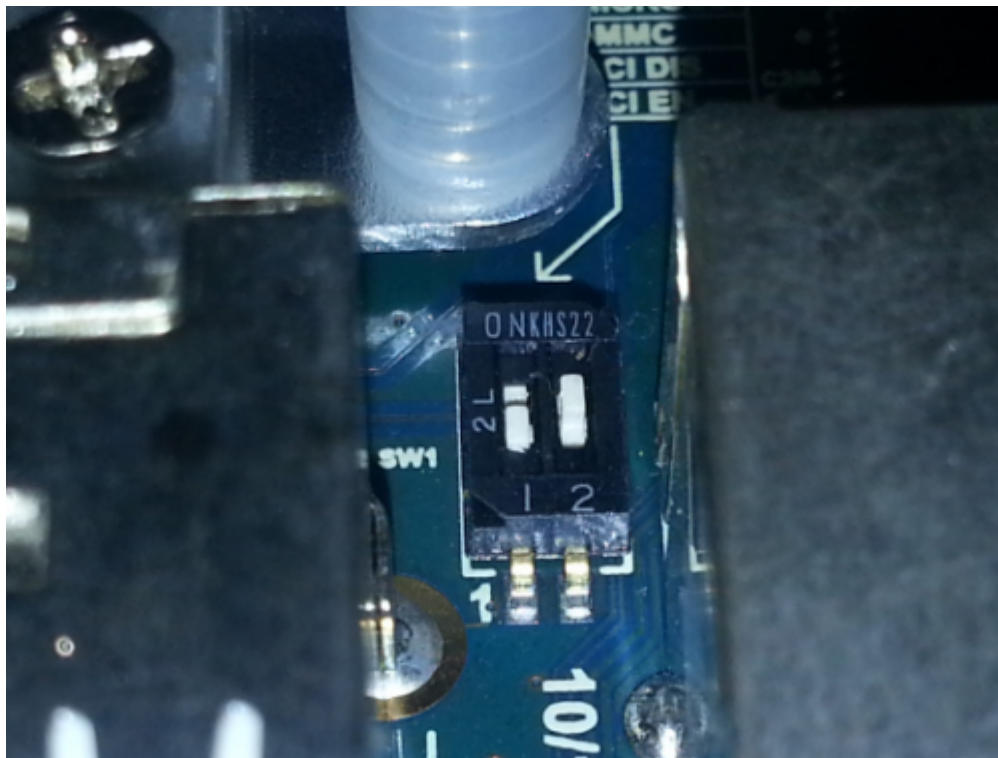

From: <http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link: http://wiki.odroid.com/old_product/odroid-xu3/hardware/xu3_bootmode_configuration

Last update: **2017/08/01 09:07**

