










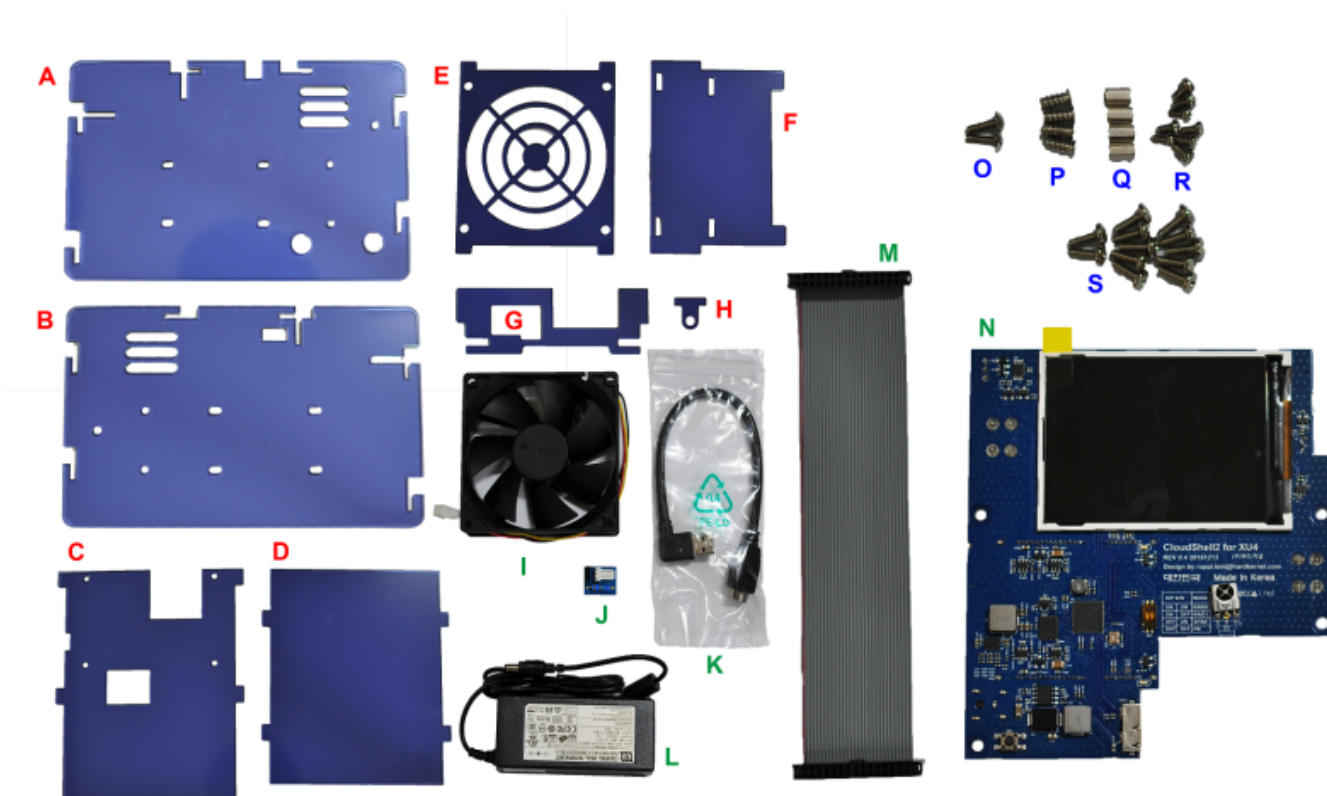

# Package include






## Package Include

- A. Left piece
- B. Right piece
- C. Top piece
- D. Front piece
- E. Rear piece
- F. Top\_2 piece
- G. Top\_3 piece
- H. Locker piece
- I. Fan
- J. Current limit fan board
- K. USB 3.0 type A-micro B cable
- L. 15V/4A Power Supply
- M. 30Pin GPIO Ribbon Cable
- N. CloudShell2 Board

# Assembly guide

<p style="text-align: center;"><b>1.</b></p> 	<p>Screw the left and right pieces to the hard disks. (A + B + P)</p>	<p style="text-align: center;"><b>2.</b></p> 	<p>Attach the Cloudshell-2 board to the hard disks.(K)</p>
<p style="text-align: center;"><b>3.</b></p> 	<p>Screw cloudshell-2 board to left/right pieces. (O)</p>	<p style="text-align: center;"><b>4.</b></p> 	<p>Assemble the FAN and back piece and place the FAN at the back side. Use only 3 screws in this step. (E + G + N)</p>
<p style="text-align: center;"><b>5.</b></p> 	<p>Insert the FAN cable to the cloudshell-2 board.</p>	<p style="text-align: center;"><b>6.</b></p> 	<p><b><u>If you want to use quiet fan mode, connect the current limit PCB between the FAN cable connector and the Cloudshell-2 board.</u></b></p>
<p style="text-align: center;"><b>7.</b></p> 	<p>Assemble the ODROID-XU4 and XU4 holder pieces. (J + M + Q + R)</p>	<p style="text-align: center;"><b>8.</b></p> 	<p>Connect micro B side of USB 3.0 cable to the Cloudshell-2 board. (H + K)</p>
<p style="text-align: center;"><b>9.</b></p> 	<p>Connect GPIO ribbon cable between ODROID-XU4 and cloudshell-2 board. (F + K)</p>	<p style="text-align: center;"><b>10.</b></p> 	<p>Connect type A side of USB 3.0 cable to ODROID-XU4.</p>
<p style="text-align: center;"><b>11.</b></p>	<p style="text-align: center;"><b>12.</b></p>		

<b>1.</b>		<b>2.</b>	
	Place the front piece at the front side. (C)		Cover the top piece on the top. (D)
<b>13.</b>			
	Put the locker piece and screw it. (I + N)		

From: <http://wiki.odroid.com/> - **ODROID Wiki**

Permanent link: [http://wiki.odroid.com/accessory/add-on\\_boards/xu4\\_cloudshell2/cs2\\_assembling2?rev=1501823170](http://wiki.odroid.com/accessory/add-on_boards/xu4_cloudshell2/cs2_assembling2?rev=1501823170)

Last update: **2017/08/04 06:06**

