


Writing bootloader with PICkit 3


MPLAB IDE Download & Install

<http://www.microchip.com/mplab/mplab-x-ide>


Run MPLABX installer

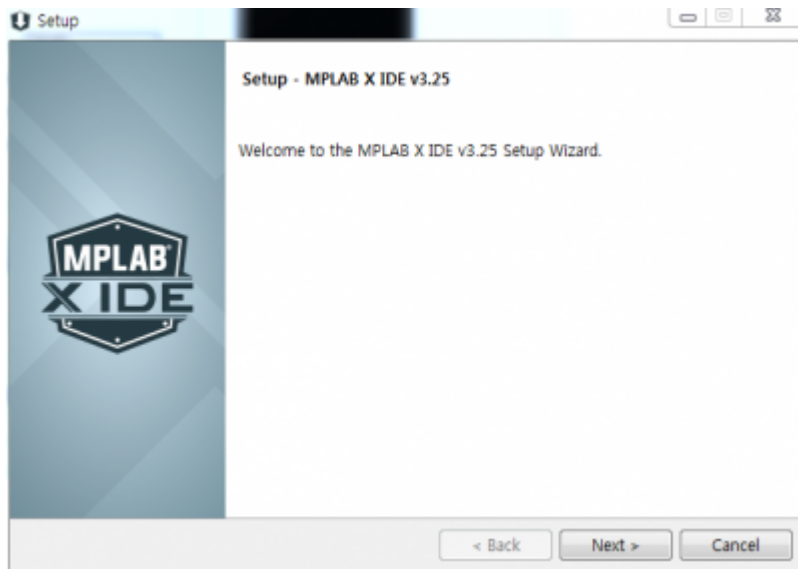

Select MPLAB IPE.

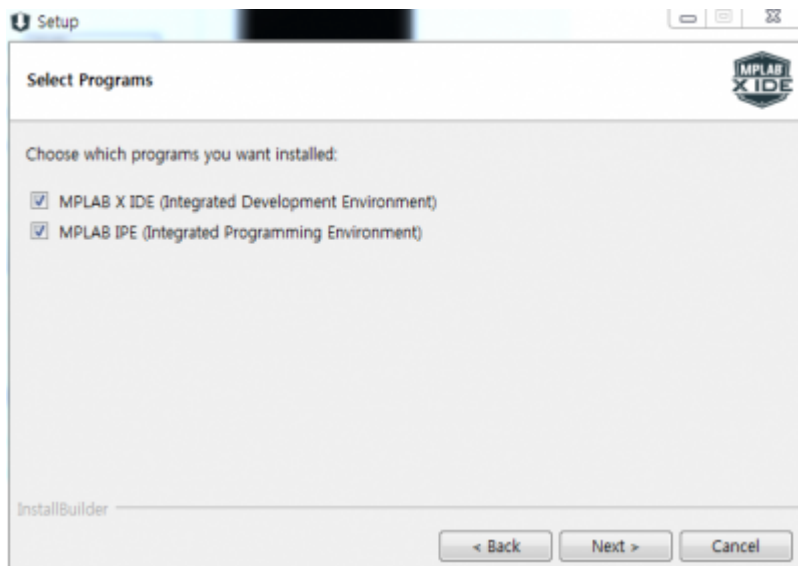


Run MPLAB IPE.

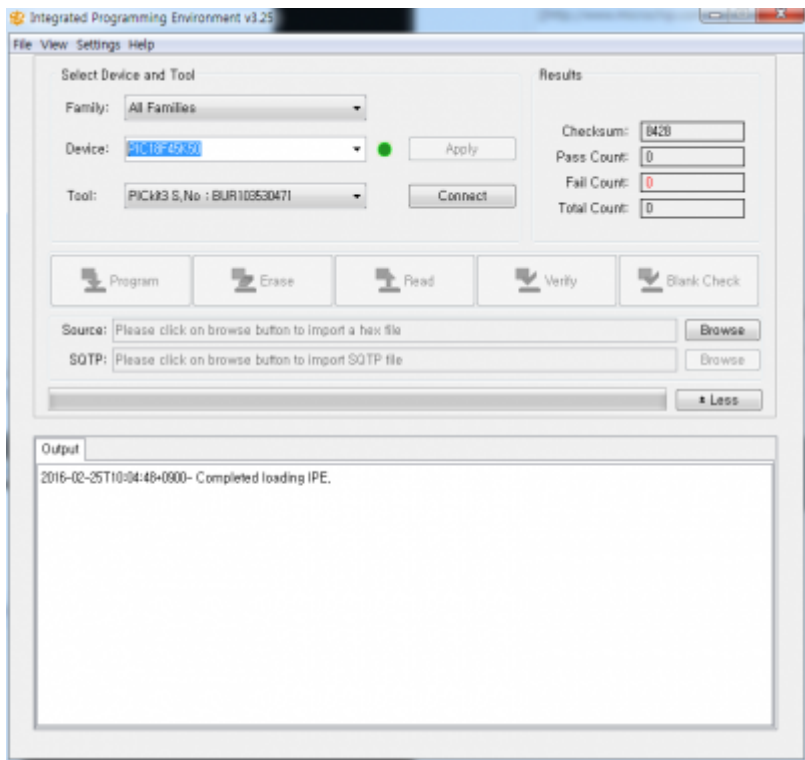

IPE Settings

Select device and tool.

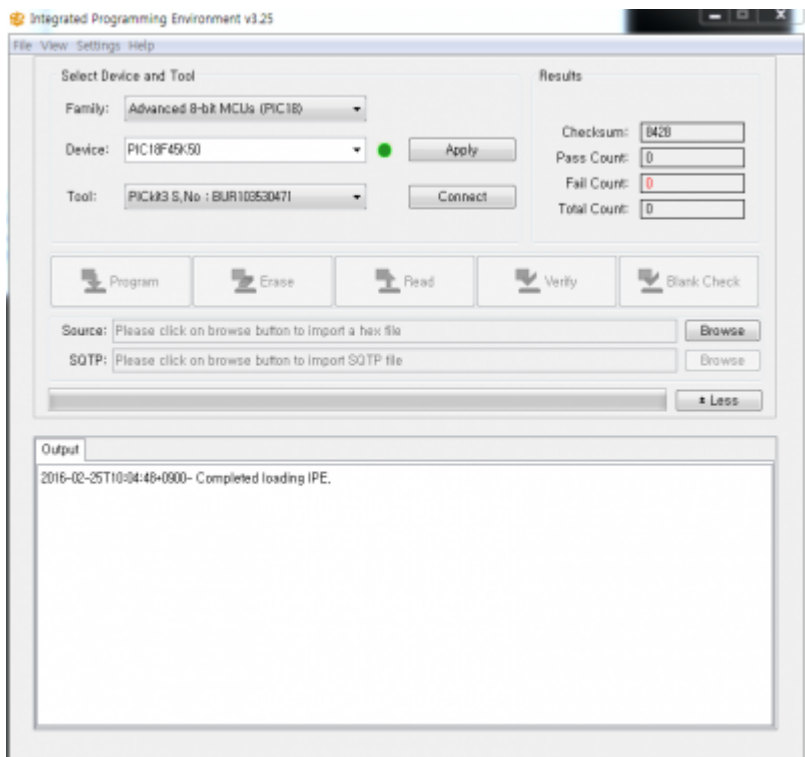


Family : Advanced 8-bit MCUs (PIC18)
Device : PIC18F45K50
Tool : PICKit3

Connect power to your USB-IOBOARD using microUSB cable.

Then, connect PICkit3.




Apply & Connect.

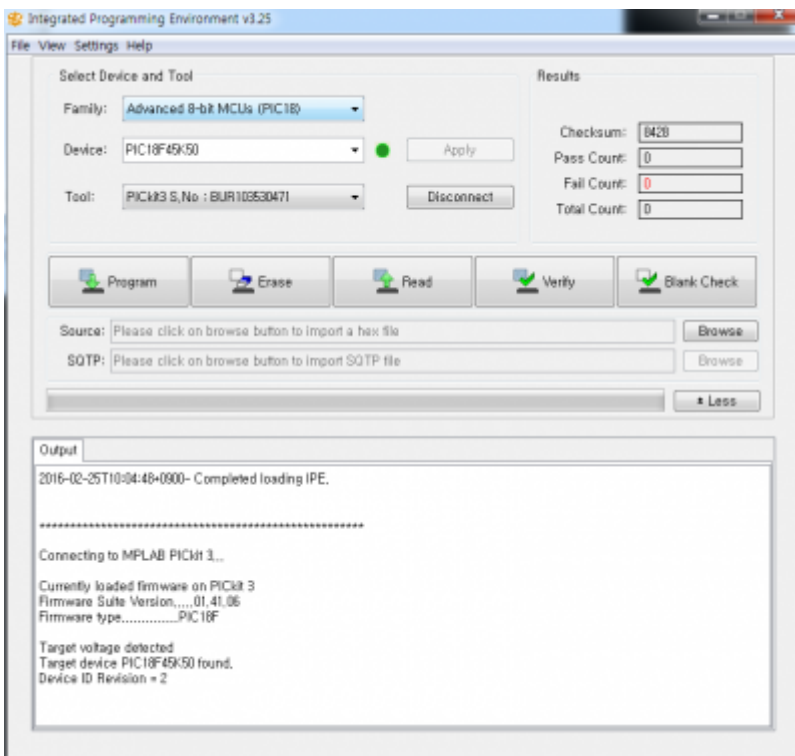


Bootloader Download.

[fw.zip](#)

Select the bootloader hex file.

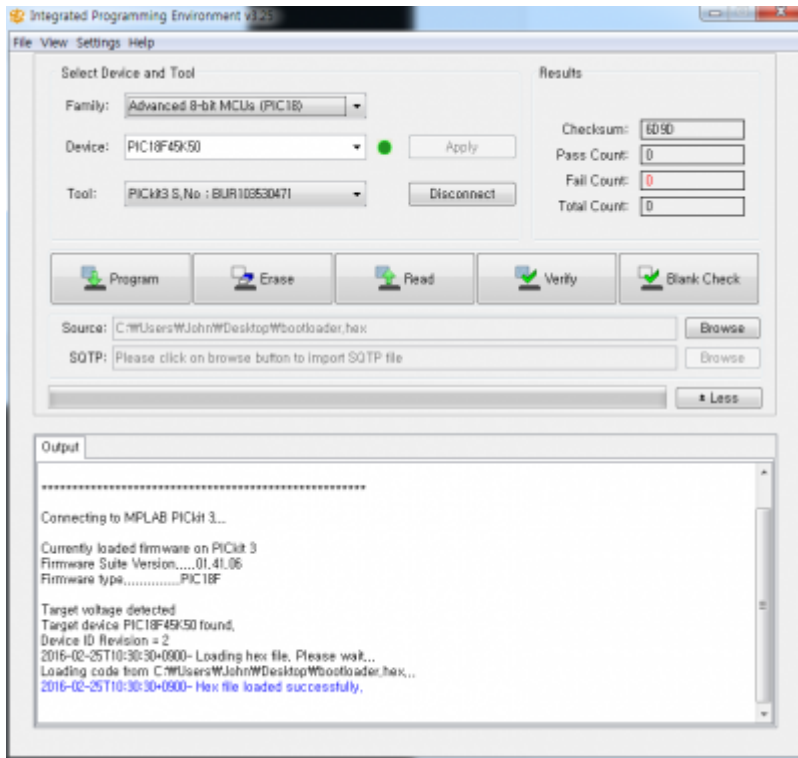

Run Program.

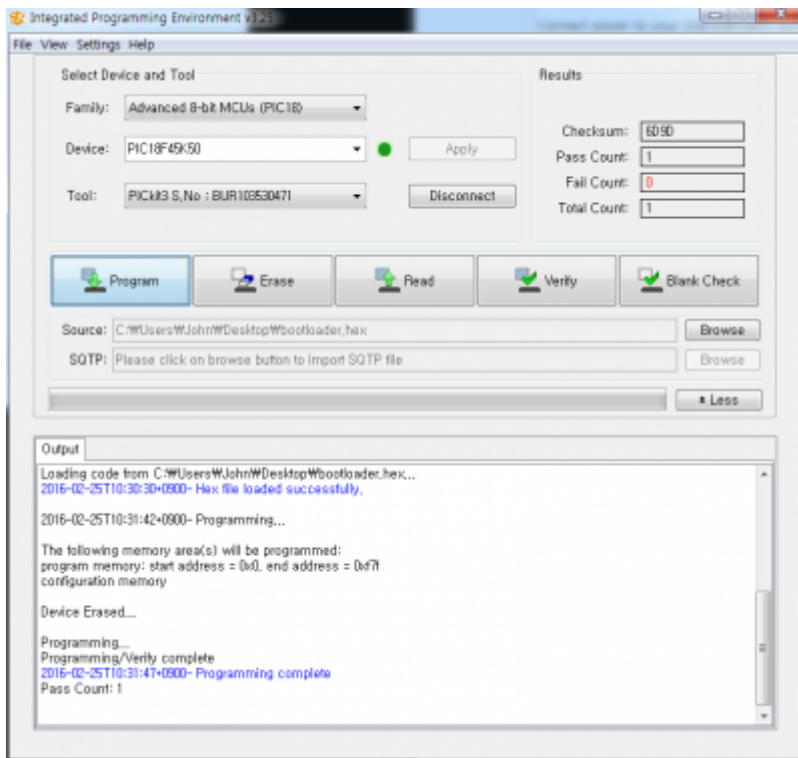

From: <https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link: https://wiki.odroid.com/old_product/accessory/picwriting

Last update: **2017/05/31 18:10**

