

Writing bootloader with PICkit 3


MPLAB IDE Download & Install

<http://www.microchip.com/mplab/mplab-x-ide>

Run MPLABX installer



Select

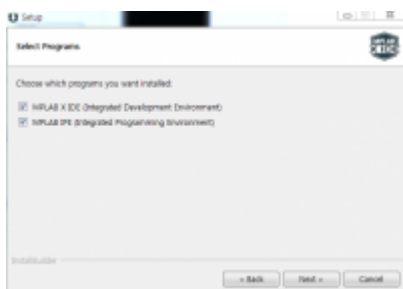

Run MPLAB IPE



IPE Settings

Select device and tool



Family : Advanced 8-bit MCUs (PIC18)
Device : PIC18F45K50
Tool : PICKit3

Connect power to your USB-IOBOARD using microUSB cable.
Then, connect PICKit3.



Apply & Connect



Bootloader Download

Select the bootloader hex file.



Run Program



From: <https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link: https://wiki.odroid.com/old_product/accessory/picwriting?rev=1456363927

Last update: **2016/02/25 10:02**

